


Challenger Door

600 Series Nova Latch Install Guide

Date: 4/13/20

BY: AWY

Parts needed for a 600 or 601 series door with a Nova latch (LK097 & LK098).

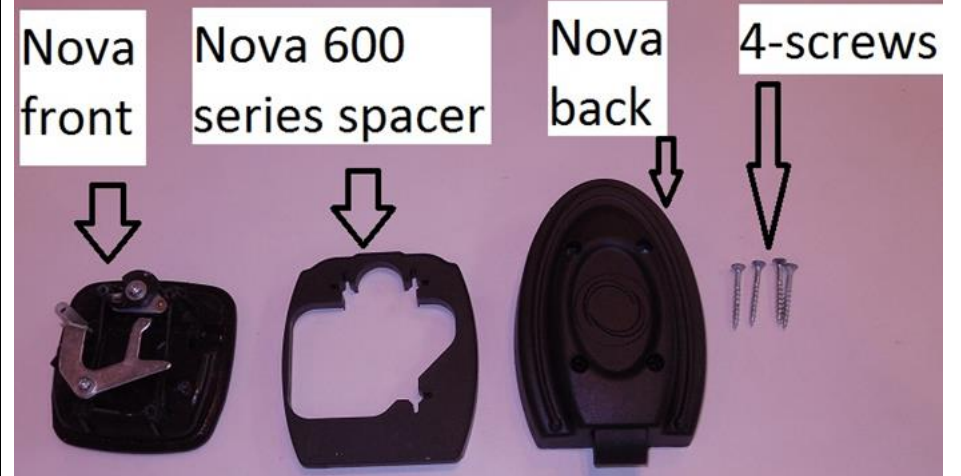


Place Nova front into the routed hole in the door.



Next install the 600 series spacer onto back of latch & door.



Next install Nova back onto spacer. Be sure to align the 2 black legs (on Nova back) behind the steel plate (on Nova front).

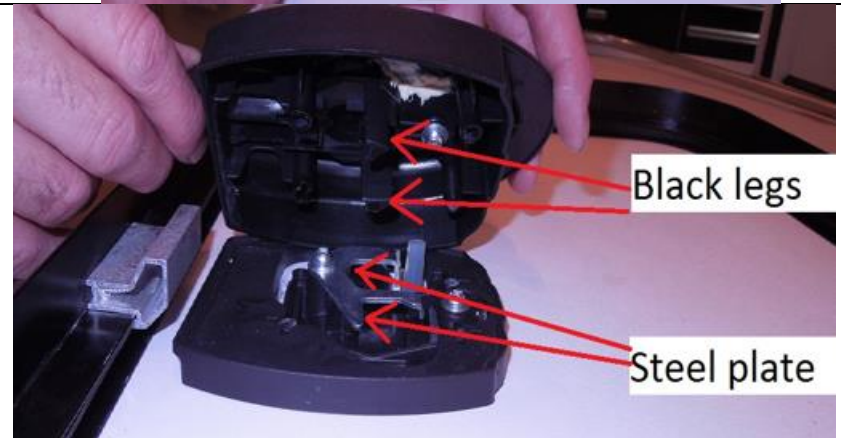

Align the 4 holes in the Nova back with the 4 holes/screw bosses in the Nova front and install the 4 screws. Tighten until the latch front and back are snug against the door panel. Be sure not to over-tighten or screws may strip out.

