


# Challenger Door

## Skin Locker Installation

Date: 4/3/20

BY:AWY


Cut new metal to fit inside existing trim on door. Leave a maximum gap of 1/16" gap. Apply new metal to door with contact spray adhesive.

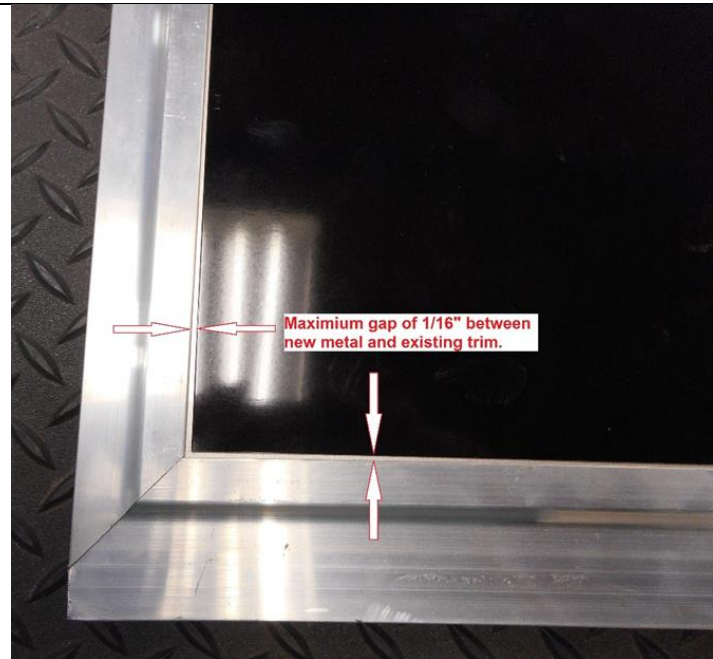

Cut Skin Locker to correct length to match trim on door. Clean/prep with alcohol. Install .045" x 1/2" VHB tape to inside surface.



Clean/prep door trim with alcohol and install Skin Locker. Make sure to line up corners.

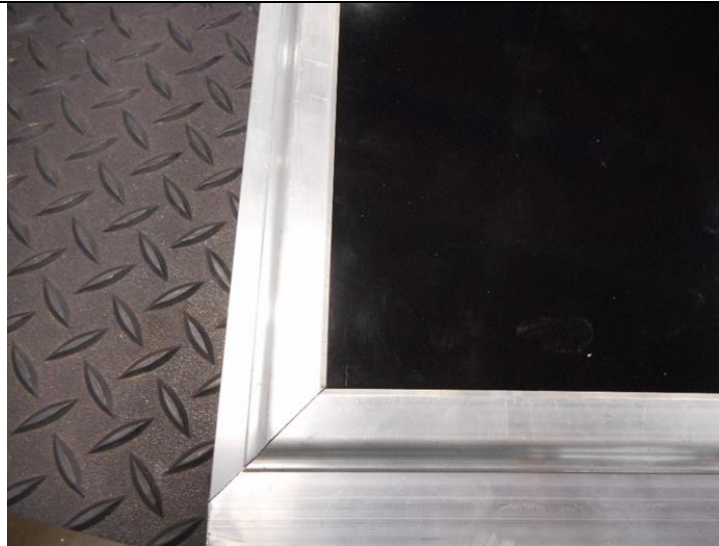

Using roller press Skin Locker firmly onto door trim.

